GRACO®

Tot Wheels Entertainer™

Activity Center

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the underside of the tray.

Models 4430 and 4440 Series

Congratulations on your purchase of a Graco® Tot Wheels Entertainer™ activity center!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® Tot Wheels Entertainer™ activity center is a wise choice, promising many hours of enjoyment for your baby.

Before using your activity center, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your activity center properly.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak with us about your product, please contact our Customer Service Department at 1-800-345-4109. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

© 1998 Graco 284-12-98

⚠ WARNING **Let**

Graco is concerned about the safety of every child who uses one of ou are equally concerned about the safety of their children. There are cert help minimize the risk that a baby using one of our mobile activity cent charge of the baby should always follow these rules.

1. Never leave your baby unattended.

Most accidents happen to children while they are unsupervised. At a m the baby at all times keeping the baby under a watchful eye. Because speed and is eager to explore all sorts of potential hazards, direct and times. If you believe proper supervision of your baby cannot be guaran which the baby cannot be adequately protected while using our mobile and that you consider instead an activity center without wheels, swing,

2. Properly prepare your baby's play spac

Potential hazards in the room must be removed or guarded against be mind that the mobile activity center gives the baby the ability to move a otherwise be possible. That means it's important to prepare play space reach, and closing doors to keep the baby away from potential hazards

- Stairs
- Steps
- Raised thresholds
- Driveways and sidewalks
- Ramps or inclines
- Decks
- Ranges, heaters, fireplaces, hot liquids and other heat sources
- Blind or dra
- Objects on
- Dangling e
- Pots and p
- Books on s
- Bathtubs o
- Swimming
- Any other

Only your commitment to safety can give your ch

When to use your Tot Wheels Entertainer

- Your baby should be able to sit unaided and be able to support most of his/her body weight with his/her legs (about 6 months old).
- Both feet should be able to touch the floor.
- Wh pla
- Wh acc

When NOT to use your Tot Wheels Entert

- Do not use until your child can sit up alone.
- When your child can walk unaided.
- When your child reaches 30 lbs. in weight.
- When your child has grown over 32 inches in height.
- If your activity center has become broken or damaged.
- If you haven't prepared a safe play space for your baby.
- If the level
- If yo
- If yo to th

Other things to avoid

- Don't lift or carry your baby in the activity center.
- Don't adjust the activity center with your baby in it.
- Don't use the activity center for commercial use.
- Don't use the activity center if it is broken or damaged.
- Do tab
- Ke an

Graco® activity centers have been designed with your child's enjoyment i by following these guidelines and using simple common sense. Let's work

Let's play safe.

es one of our products. We know that parents and other caregivers here are certain safety precautions which you must always take to activity centers will be harmed. Specifically, the parent or caregiver in

led.

vised. At a minimum, the caregiver should be in the same room with e. Because a baby can propel a mobile activity center at surprising s, direct and diligent supervision by the caregiver is required at all ot be guaranteed, or that your home presents particular dangers from g our mobile activity center, we suggest that you not use this product heels, swing, playard, or other fine Graco® product for your baby.

lay space — neutralize potential hazards.

d against before placing a baby in a mobile activity center. Keep in ity to move around the play area much more quickly than would e play space by installing and using gates, removing objects from ntial hazards, such as:

- Blind or drape cords
- Objects on tables
- Dangling electrical cords or small appliances
- Pots and pans on stoves
- Books on shelves
- Bathtubs or open toilets
- Swimming pools or other containers filled with liquid
- Any other dangers unique to your environment

ve your child the safe, happy playtime you desire.

ertainer™ activity center

- When you are able to watch your baby at all times while playing in the activity center.
- When you have prepared your baby's play space according to these guidelines.

s Entertainer™ activity center

- If the tray of your activity center is lower than your baby's waist level when your child stands in the activity center.
- If you haven't blocked access to stairs and steps.
- If you haven't assembled the activity center according to these instructions.

- Don't use the activity center with your child in it on a table or countertop.
- Keep dangling electrical cords out of baby's reach, such as an iron on an ironing board, lamp cords, etc.

enjoyment in mind. It is your responsibility to ensure your baby's safety e. Let's work together to keep your baby safe and happy.

⚠ WARNING

STAIR HAZARD:

Avoid serious injury or death.
Block stairs/steps securely before using walker.

Never leave child unattended. Always keep child in view while in walker.

Use only on flat surfaces free of objects that could cause the walker to tip over.

To avoid burns, keep your child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.

To reduce the chance of your child slipping out of the seat, check that both of your child's feet touch the floor.

Never carry the product with the child in it.

Discontinue using walker should it become damaged or broken.

Read all instructions before assembly and use of this product.

Keep instructions for future use.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your activity center.
If any parts are missing, call Customer Service at 1-800-345-4109.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.

Tools required: Wrench or pliers, screwdriver

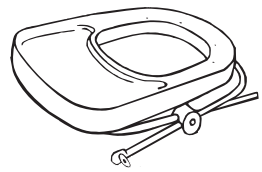

Tray

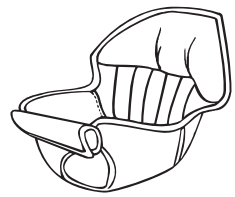

Seat

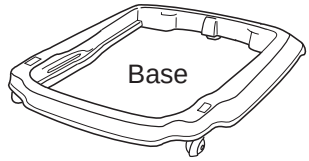

Base

Seat rod with threads

Screw (4)

Nut

Pin (2)

Attaching the Seat

Step 1.

On playtray models, remove playtray from activity center tray by unsnapping both side tabs from under tray.

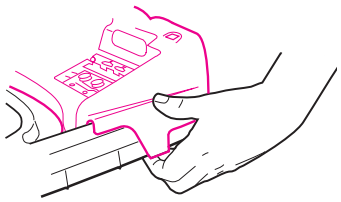

Step 2.

Insert the pegs on the seat back into the four holes located at the rear of the tray.

Underneath the tray, insert the four screws into the centers of the pegs. Press down on the seat back to help the screws connect with pegs. **Tighten the screws securely,** but do not overtighten.

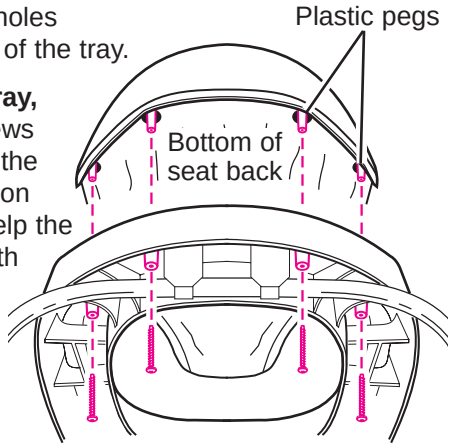

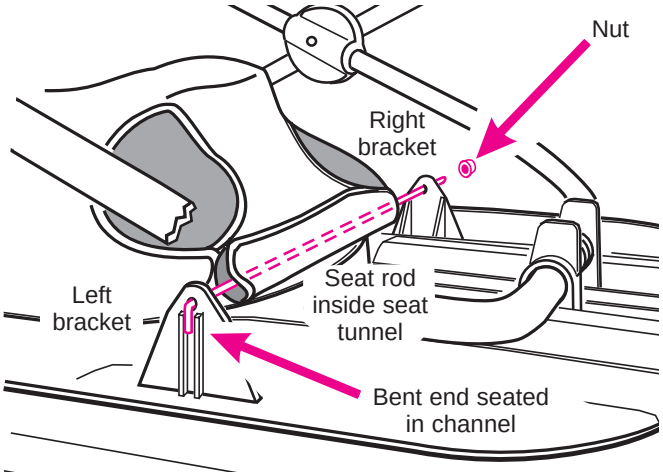

Step 3.

With the tray assembly upside down and its front facing you, pull up on one of the tube ends until the tubes snap into the first height position.

Insert seat rod through hole in left bracket, then through the tunnel of the seat.

Step 4.

Now push the threaded end of the seat rod through the right bracket hole. Turn the bent end of the rod so it fits securely into the left bracket channel. Push it into place.

Place nut on seat rod threads and **tighten securely** with wrench or pliers.

Attaching the Base

Step 1.

Place base on floor with wheels down.

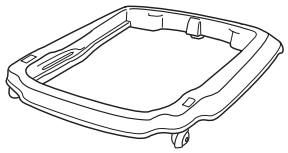

Step 2.

Open tubes of tray assembly as shown until they latch.

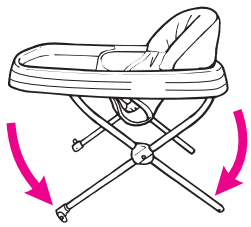

Step 3.

Front tube has plastic “T” ends. Tilt tray assembly as shown. Insert one plastic “T” into slot on the inside front of the base. Repeat on opposite side, flexing tube inward if needed to engage the slot.

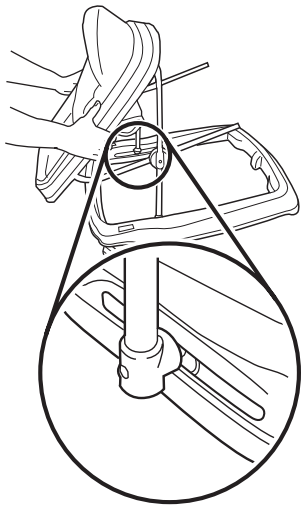

Step 4.

Lower rear tube so holes in ends of tube line up with two holes in back of activity center base.

Be sure that plastic “T” pieces remain in their slots.

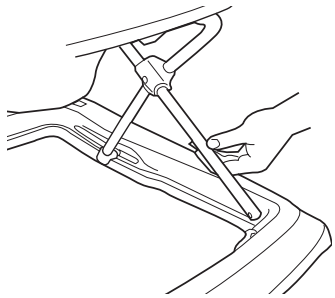

Step 5.

Insert pin into hole as shown, through tray tube, and out through base hole on the other side.

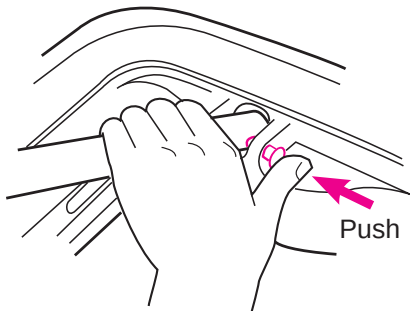

Press firmly until tab snaps over head of pin. Repeat on other side.

Be sure all parts of tray and base are securely fastened, with “T” pieces in their slots and tabs holding pins firmly.

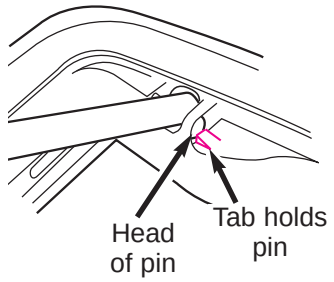

Adjusting the Activity Center

⚠WARNING Remove your child from the activity center before making any adjustments.

Step 1.

To raise your activity center, hold the base with one hand while lifting the tray with the other hand.

Adjust the tray so that it is no lower than waist level when your child is standing in the activity center.

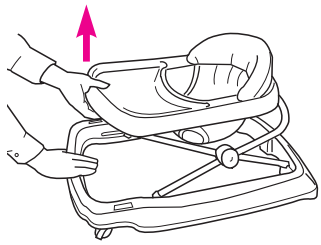

Step 2.

To lower (or fold) your activity center, reach underneath the tray and squeeze the finger latches, **holding them in** while you lower the tray. Tray should lower easily. **DO NOT force tray down** or unit could be damaged.

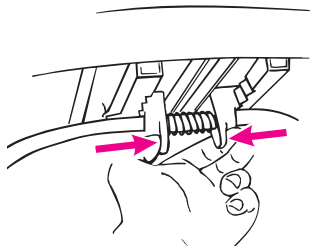

To Lock or Unlock Rear Wheel (on certain models)

The rear wheel can be locked in position to limit baby's movement.

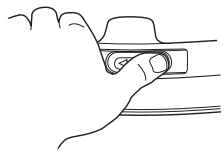

To **unlock**, slide the bar to the **right**. The word "GO" will appear.

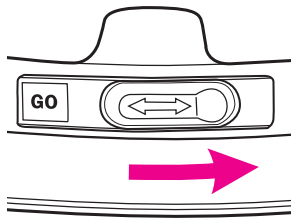

To **lock**, slide the bar to the **left**. The word "STAY" will appear.

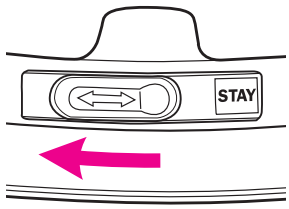

Friction Strip Feature

⚠WARNING Avoid serious injury or death. DO NOT use product without the five friction strips under the base.

- Make sure strips are kept clean.
- Clean strips with WATER ONLY.

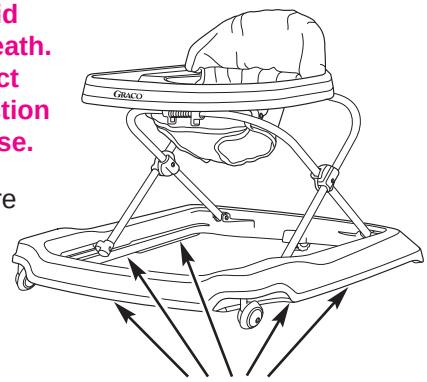

Friction strips under base

Caring for your activity center

Make sure five friction strips under base are kept clean. Clean with water only.

For cleaning vinyl seat, metal and plastic parts other than friction strips, use only household soap or detergent and warm water. NO BLEACH.

Excessive exposure to sun or heat could cause fading or warping of parts.

To Use Parking Stands (on certain models)

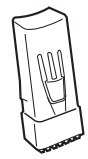

To install parking stands, lift base slightly, depress button on front of stands and push stands up until they snap into place.

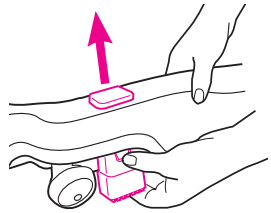

To use parking stands, lift base slightly and push stands down until they snap into place.

To release parking stands, lift base slightly and depress button on front of stands. Push stands upward into storage position.

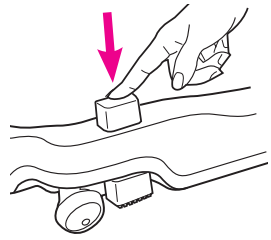

⚠WARNING

- **When parking stands are in use, it is still possible for your child to move the activity center.**
- **Be sure to engage both parking stands.**
- **Never place the activity center on a table or countertop.**

Installing the Playtray (on certain models)

Do not install the playtray while your baby is in the activity center.

CHECK that you have all the parts listed at right before assembling your playtray.

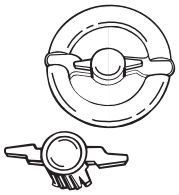
Steering wheel and cap

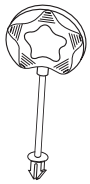
Teether and stalk (style may vary)

Phone and cord

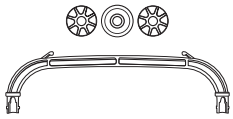
Bar, two beads, one ring

Music key (3)

Stickers

Step 1.

Assemble the toys on the tray as shown.

Push and twist the ring and two beads onto the toy bar.

Snap the toy bar into the holes in the playtray; **slight curve in toy bar must curve away from steering wheel**. Be sure both ends of the toy bar are firmly snapped into the playtray.

Once the toy bar is inserted into the playtray, you will not be able to remove it.

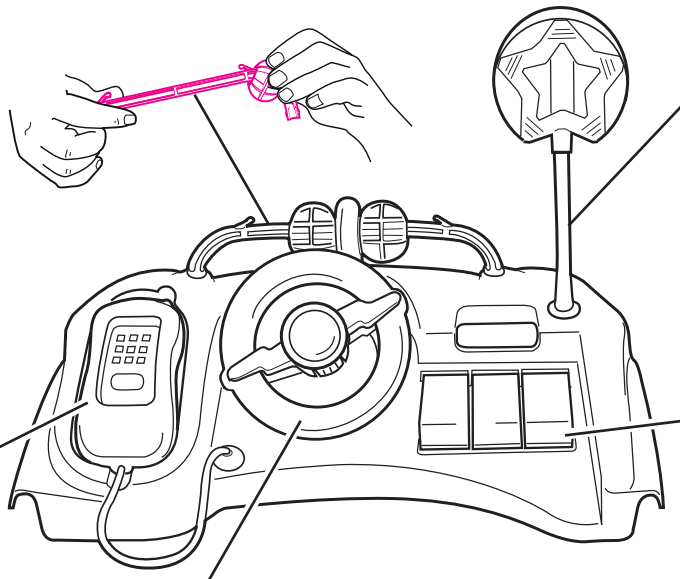

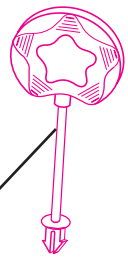
Insert teether stalk into the small square hole in the tray.

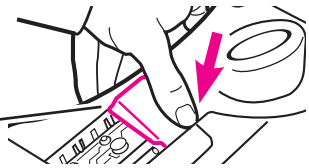
Snap music keys in place over the printed circuit board.

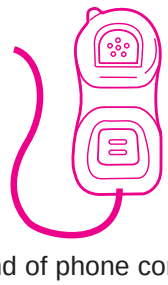
Push end of phone cord through small hole in tray, then tie a knot under the tray.

Pull on phone cord to make sure cord is secure.

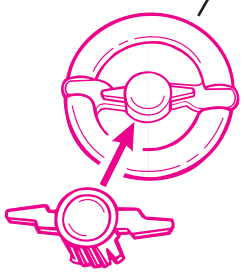
Push wheel cap onto steering wheel, then push assembly into large hole in tray. Check that all four tabs go into hole in tray.

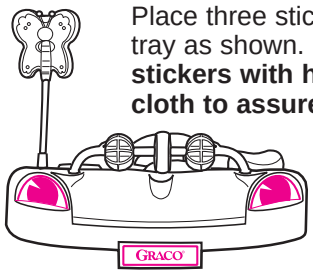

Place three stickers on front of tray as shown. **Rub over stickers with hand or clean cloth to assure adhesion.**

Step 2.

Line up front of playtray with front edge of activity center tray as shown.

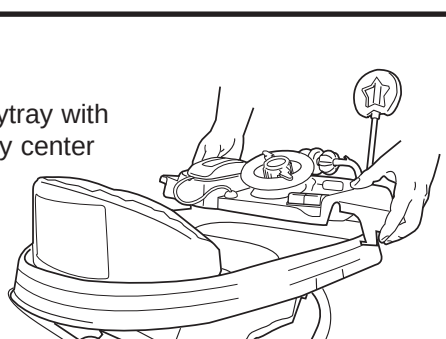

Step 3.

Push playtray down so both side tabs snap under the activity center tray.

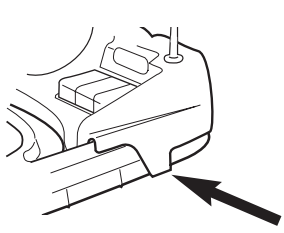

Step 4.

CHECK that playtray is secure on activity center by pulling up on playtray.

⚠WARNING Do not lift this product by the playtray.

Removing the Playtray

To remove tray, pull the two side tabs outward, and lift up playtray.

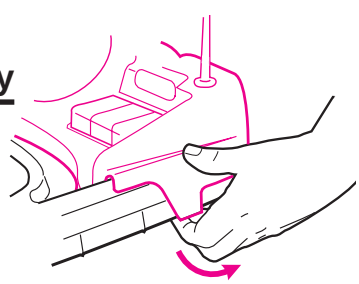

Installing the Toy Gym (on certain models)

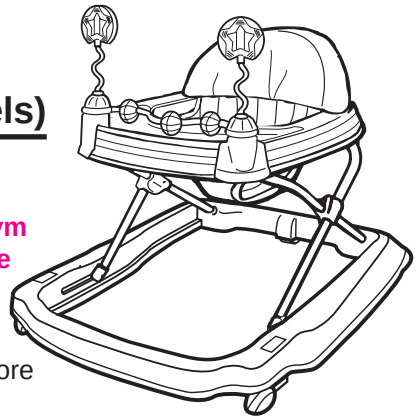

Do not install the toy gym while your baby is in the activity center.

CHECK that you have all the parts listed below before assembling your toy gym:

Teether and stalk (2 each)

Mounting post and cap (2 each)

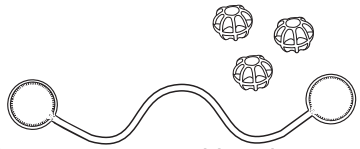

Bar and beads

Step 1.

To mount beads on bar, flatten ring at one end of bar as shown and push through hole in center of each bead.

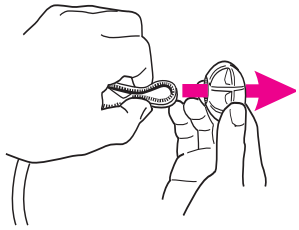

Step 2.

Place ring on top of a mounting post. Shorter teeth must be on the bottom, as shown. Top of mounting post will be even with top of ring. Snap cap into place inside mounting post. Repeat with the other ring, post and cap.

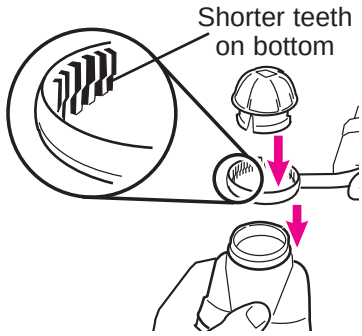

Step 3.

Mount posts onto front corners of activity center tray as shown until they snap securely into place. Center of bar should curve away from the seat, not toward it.

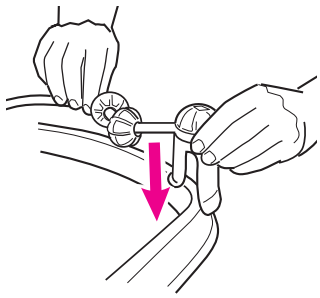

Step 4.

Push wand into the square hole at top of mounting post cap. Pull on wand to be sure it is secure. Repeat for other side.

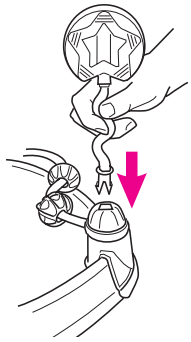

⚠WARNING Do not lift this product by the toy gym.

Replacement Parts

Instructions for ordering activity center parts:

Complete form below. Your activity center model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the underside of the tray. Payment must accompany your order.**

Parts List:	Price:**
Tray	$ 15.00
Cloth seat	$ 13.00
Rear wheel	$ 8.00
Seat rod/nut	$ 7.00
Caster	$ 5.00 (each)
Hardware	$ 5.00
Pin	no charge
Parking stand*	$ 5.00 (each)
Toy gym*	$ 13.00
Playtray with all toys*	$ 20.00

* Certain models only

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions, please call toll-free:

1-800-345-4109

Return the form below with payment to:

GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number

_____
(Must be filled in)

- ☐ Tray
- ☐ Cloth seat
- ☐ Rear wheel
- ☐ Seat rod/nut
- ☐ Caster
- ☐ Hardware
- ☐ Pin
- ☐ Parking stand
- ☐ Toy gym
- ☐ Playtray with toys

Total:_____

Shipping & handling:_____$5.00

6% sales tax (PA only):_____

Total amount due:_____

SHIP TO:

_____
Name

_____
Address

_____
City, State, Zip

(____)_____
Telephone

☐ Check enclosed (payable to Graco Children's Products Inc.)

☐ Charge to credit card:
- ☐ Visa
- ☐ MasterCard
- ☐ Discover

Account #:_____

Expiration date:_____

Signature:_____